

# STARKE **ARVID**

## Instructions for Use

### Trestle Stand



# Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products.

Browse in at [www.starkearvid.se](http://www.starkearvid.se)

## General use and safety regulations:

- Maximum load must not be exceeded.
- Distribute the trestles evenly on the stand.
- Use the necessary safety equipment.

## General maintenance and care instructions:

- Check all welding joints at least once a year.
- Remove any outer rust and coat with anti-corrosive paint..
- Replace worn parts.
- When unsure, contact Alia AB.

5 different shelvings



Easy to disassemble shelves

# Technical Data

## Trestle Stand

Article no:	21100
Maximum load:	700 kg
Width:	800 mm
Length:	1200 mm
Height:	1600 mm
Weight: (Europe-pallet board included)	65 kg

### Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

### Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01. The product may not be modified by the user.

*Produced and  
marketed by:*

**Alia AB**  
Box 93  
SE-459 22 LJUNGSKILE

**Phone:** +46-(0)522 22 000  
**Fax:** +46-(0)522 22 344

*office@starkearvid.se*  
*www.starkearvid.se*