

STARKE **ARVID**

Instructions for Use

Waste Skip



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products.


Browse in at www.starkearvid.se


General use and safety regulations:

- Check the lifting equipment before each lift.
- Maximum load must not be exceeded.
- Distribute the load evenly in the skip.
- Under no circumstances may a person be allowed under the load.
- Use the necessary safety equipment.

General maintenance and care instructions:

- All mobile parts must be greased once a month.
- Check all mobile parts as well as welding joints and other material at least once a year.
- Remove any outer rust and coat with anti-corrosive paint.
- If the lifting rings are under \varnothing 13 mm at the place of most wear, these must be replaced.
- Check the lifting rings with crack indication spray.
- Replace worn parts.
- When unsure, contact Alia AB.

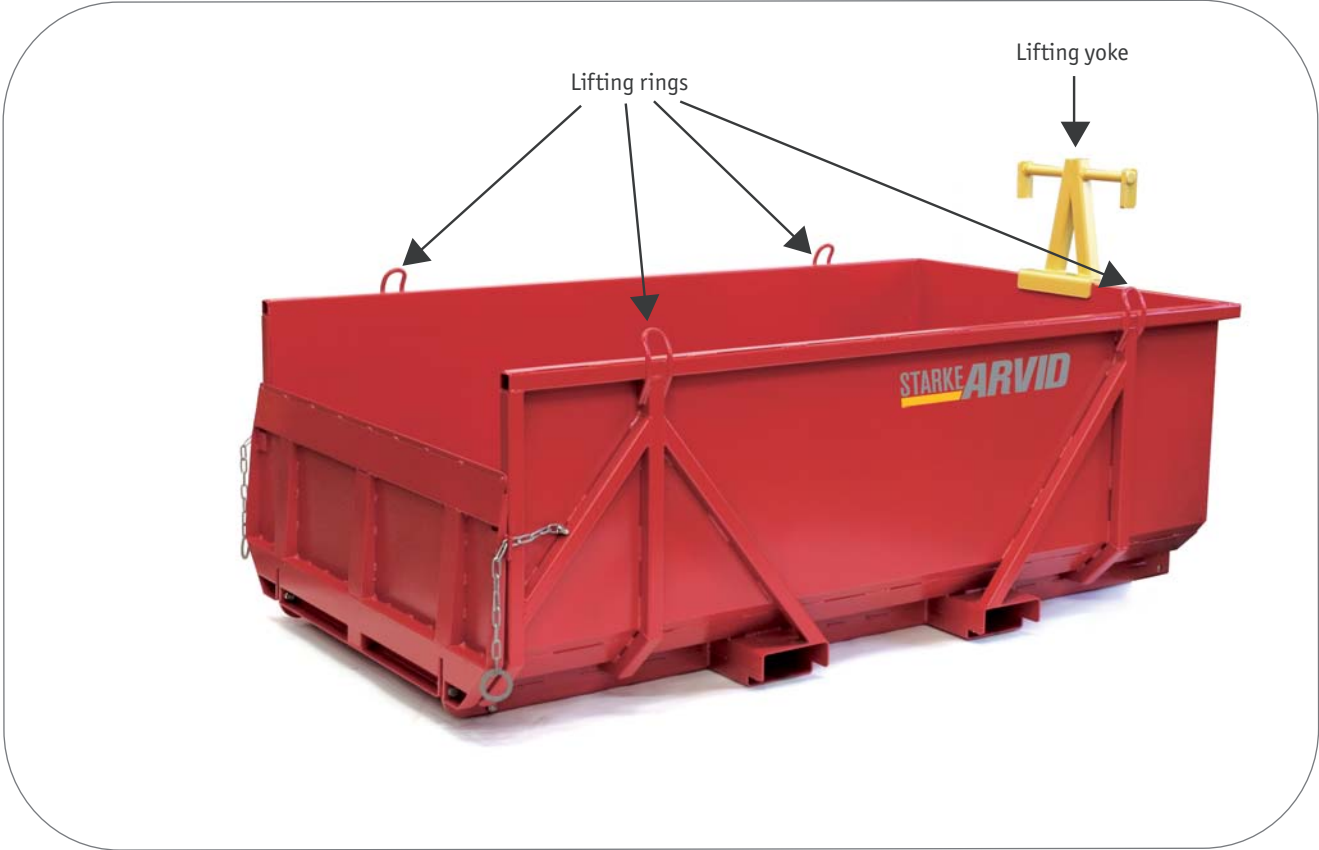

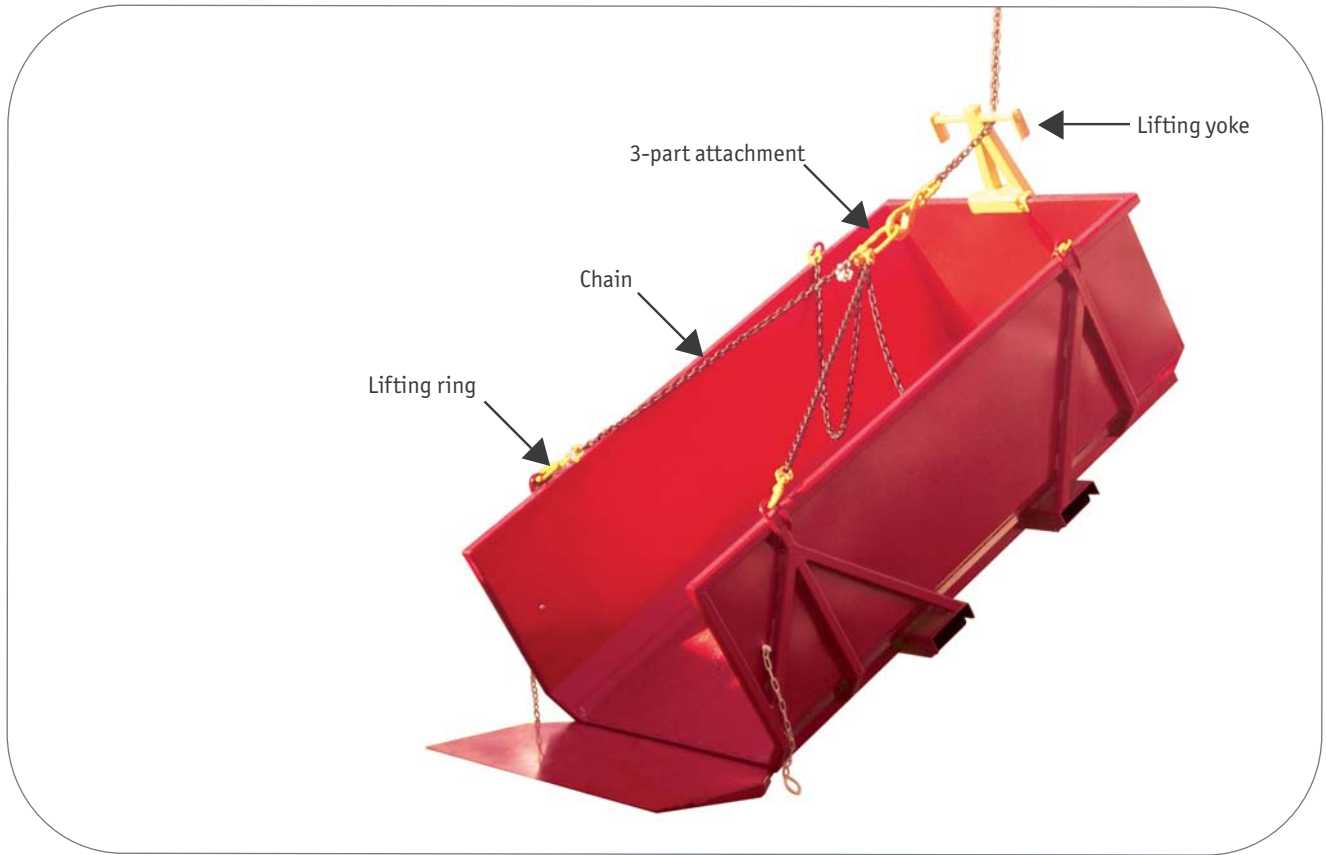

Open rear flap



Lifting ring

Technical Data

Waste Skip

Extra Equipment:

Article no:	33100	Rear side flap
Maximum load:	2500 kg	Lifting yoke
Width:	1340 mm	
Length:	2400 mm	
Total length flap incl.:	2460 mm	
Height:	825 mm	
Weight:	325 kg	

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01. The product may not be modified by the user.

*Produced and
marketed by:*

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se